


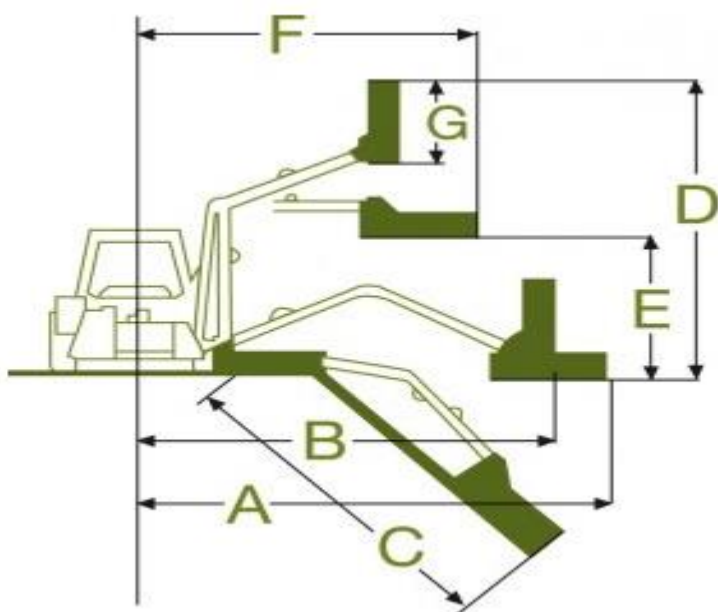

|             |         |         |         |         |         |         |         |
|-------------|---------|---------|---------|---------|---------|---------|---------|
| Jupiter 600 | A<br>mm | B<br>mm | C<br>mm | D<br>mm | E<br>mm | F<br>mm | G<br>mm |
|             | 6000    | 5500    | 4800    | 5900    | 2800    | 2500    | 1200    |

| Poids | Rpm prise<br>de force | Rpm<br>tracteur | HP<br>pompe | HP<br>Tracteur | Lt<br>huile | Poids tracteur<br>min | Largeur |
|-------|-----------------------|-----------------|-------------|----------------|-------------|-----------------------|---------|
| 1210  | 540                   | 3000            | 45          | 40             | 205         | 4300Kg<br>HP90/110    | 210 Cm  |